

Wireless PC Card Adapter Driver Installation

These instructions describe the procedure to install the driver for the 2Wire Wireless PC Card under Microsoft Windows Vista 32 bit, and to run a wireless configuration program to configure your 2Wire Wireless PC Card to work with the 2Wire gateway.




Note: The driver software available for download is for new installations only. If you have already used the driver software supplied on the CD to set up your 2Wire Wireless PC Card, do not re-install the driver software.

Step 1: Driver Installation

Windows Vista 32

1. Ensure that your 2Wire Wireless PC Card is not inserted in your computer. Download the driver package file to your local hard disk.
2. Double-click the driver package file to extract all driver files. The driver installation files will be placed on your hard disk in the C:\TWWGPC_TEMP directory.
3. Insert your 2Wire Wireless PC Card in your computer's card slot. The Windows Found New Hardware Wizard will start. Select **Locate and install driver software (recommended)**.
4. Click **Next**.

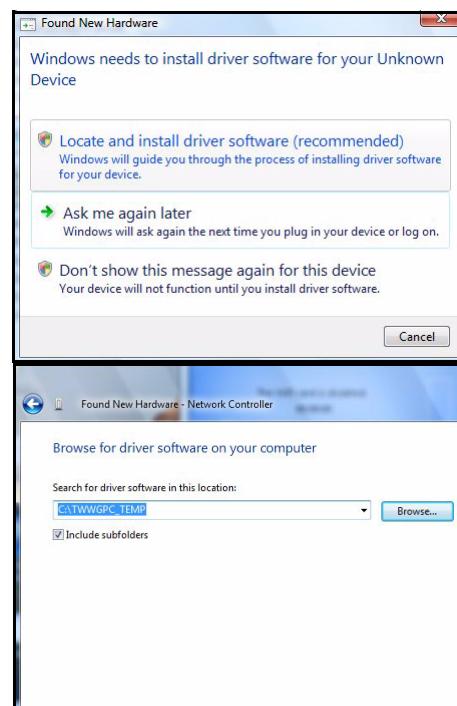

5. Select the **Include this location in the search** checkbox. Specify C:\TWWGPC_TEMP as the location of the driver.
6. Click **Next**.
7. Follow the on-screen instructions to complete the driver installation.

8. Select **Install this driver software anyway** and click it once.
9. Continue to Step 2: Wireless Configuration.



Step 2: Wireless Configuration

1. From the C:\TWWGPC_TEMP directory, run the setup.exe program. To do so, click **Start > Run**. The Windows **Start** button is typically located in the lower left-hand corner of the computer screen.
2. Enter C:\TWWGPC_TEMP\setup.exe to launch the program.
3. Follow the on-screen instructions to configure your wireless setting. Enter the 2Wire gateway's serial number and encryption key, located on the bottom of your 2Wire gateway.

